


## Intellytech LiteCloth 2.0 Quickstart Guide

### Assembly


1. Fully unfold **foldable LED mat** so that the blue side is facing up.

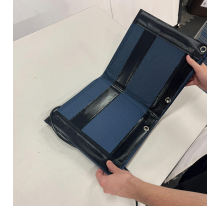

2. Unfold the **frame mounting bracket**. *It should look like an H when fully extended.*



3. Attach **mounting bracket** to velcro strips on the **LED mat**. *Make sure all contact points are attached.*

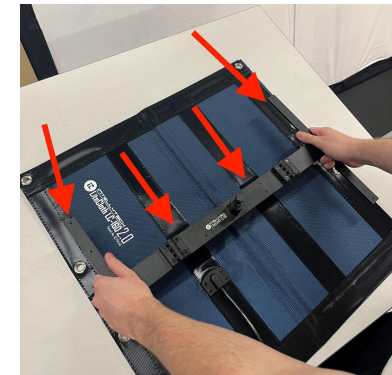

### Mounting on a Light Stand

1. Attach the **double jointed silver bracket** to the pin on the frame mounting bracket. Tighten.
2. Attach to stand and tighten.
3. You can pivot the light to desired position via the **double jointed silver bracket**.




## Intellytech LiteCloth 2.0 Quickstart Guide

### Softbox and Grid Installation

1. Unfold **black soft box**; line corners up to the **LED mat**.
2. Fold the inner edge of the **softbox** onto the outer edge of the **mat**, pressing velcro attachment points together.
  - a. *There are 4 gaps on the **softbox**. Make sure that the 4 gaps go over the 4 corners of the mat.*


Attach the **white fabric diffusion** to the velcro strips on the inside of the **black soft box**.

OPTIONAL—Attach **grid** to the velcro strips on the inside of the **soft box**. *This **grid** prevents light spill and more precisely focuses the light beam. There is enough space to have the **diffuser** and **grid** attached simultaneously.*

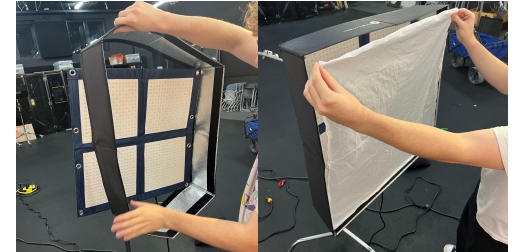



Mounting **Control Box** to Light Stand: *The **Control Box** is how we will power and control the light.*

1. Connect **v-lock clamp** onto the light stand.
2. Slide the **v-shaped receiver** from the **Control Box** onto the **v-mount slot** on the clamp. Make sure it is locked in place.
3. Push the release button to release.

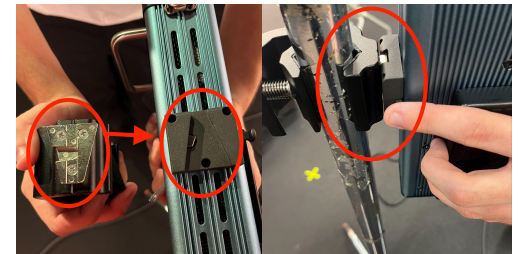

### Connecting **PowerCON** Cable to **Control Box**

1. Take the 4-pin cable (blue ring) attached to the **LED mat** and connect the 4-pin receiver on the **Control Box**. Hint: Use the arrows the line up the cable. *Turn blue ring to release.*
2. Insert **PowerCON cable** (yellow ring). Turn the yellow ring like a key to lock in place. *You **must** lock in place, otherwise, the unit will not power on.*
3. Flip the Power switch to turn **ON**.

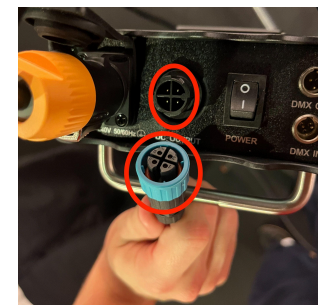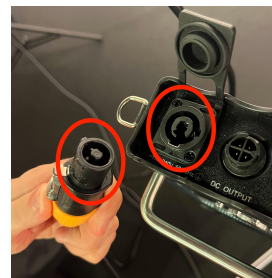

## Intellytech LiteCloth 2.0 Quickstart Guide

### Menu Selection on the Control Box

1. There are 3 menu selections. To change your menu selection, press **Menu**.  
**Menu 1:** Output & CCT - controls output from **0-100%** and CCT from **3,000-9999k**.  
**Menu 2:** Effect Selection - Select your desired effect, speed, and output of that effect  
**Menu 3:** Bluetooth - allows device to be reset and paired with phone or tablet

### Using Wireless Controls

1. App/Bluetooth: control via Bluetooth using the **Intellytech LiteSync+ app**, available in the iOS store for Apple devices. Android users will need to email Intellytech for a link.
2. When pairing your phone/tablet, make sure your device has bluetooth enabled.
3. Make sure the **CH** is set to **1** or higher.
4. In the LiteSync + app, tap the **+** symbol in the top right corner of the app.
5. Go to the **BT\_RESET** Menu Selection on your Control Box and rotate the knob to read **YES**. This will make the light discoverable. It is normal for your unit to quickly change back to a **?** symbol after resetting.
6. You will then see the matching 4 digit number in your app as shown on your control box. Tap **+** to add that device.
7. Return to the home screen on the app and you can now find and control the LiteCloth 2.0.

